

Thank you for selecting Clean products.

Before using the tester, relevant person must read and understand the contents of this operation manual. Operation Manual should be kept accessible within the person who use the testers.

TABLE OF CONTENTS

1. Product Overview	2
2. Precautions	3
3. CONFIGURATION and LCD INTRODUCTION	3
4. Key Panel	4
5. Battery and electrode installation	4
6. Measurement Mode	5
7. Calibration Mode	5
8. Set up	6
9. Parameters	7
10. Package	7
11. Error	8
12. GENERAL INFORMATION	8



1. Product Overview

- Precise and easy operation, Comfortable holding, all functions operated in one hand.
- Large LCD with backlight, Multi-line display for easy reading, Auto-Power Off saves battery after 5 mins non-use
- 1*1.5V AAA long battery life, User replaceable battery and high-impedance plane electrode.
- Floats on water, IP67 rated
- Field throw measurement(Auto Lock Function)
- Unit display: ppm or %.
- Automatically compensates salinity / barometric after manual input for increased accuracy.
- User replaceable membrane cap (CS49303H1L).



Floats on water
IP67 rated




Large LCD with
backlight
Multi-line display
for easy reading



Field throw
measurement
(Auto Lock Function)




1*1.5V AAA
long battery life

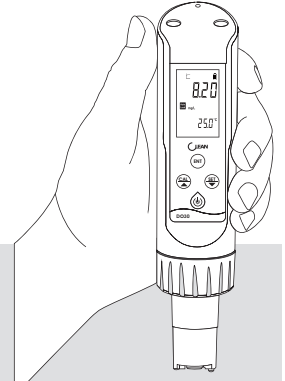

www.cleaninst.com
E-mail: CS@cleaninst.com
021-63531465



2. Precautions

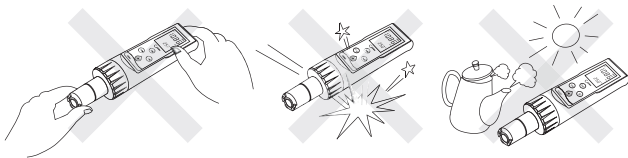


Please wipe up the electrode with clean tissue or cloth before using.

Do not throw or beat, squash or twist the tester deliberately.


Do not expose to the direct sunlight or put in high humidity or high temperature environment .

Do not use for long time under water.

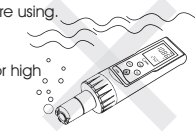

3. CONFIGURATION and LCD INTRODUCTION

- Set up
- Data stabilized
- Calibration Mode
- Low battery indicator
- Measurement mode
- Auto Lock function
- Auto Lock after data stabilized
- In calibration
- Sensor slope is above 75%
- Sensor slope is between 50%-75%

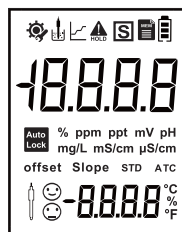

4. Key panel

Key instruction

Short press: Short press means release the key once after pressing.
(If there is no mark out below, default it as Short press)

Long press: Long press means press the key for 3 seconds and then release it

Hold: Hold means not release the key and accelerate after a certain time. Not release the key until the value is set as needed.

	Long press to Power ON/OFF Short press to ON/OFF backlight Escape key when in calibration mode and setting up
	Calibration key when in measurement mode Long press to enter into parameter browsing Increment values or scroll through the next options available
	Data setting Decrement values or scroll through the next options available
	Confirm key Press to unlock in Auto lock mode

5. Battery and Electrode installation

Unscrew the screw cap by following the arrow direction, slightly unplug the electrode, install the battery (pay attention to the anode and cathode of the electrode).

Then install back the electrode and the screw cap.

Low battery prompt is at the top of the screen when battery power is low. (You can refer to the LCD INTRODUCTION). Please change the same model battery.

